

**morphy richards®**



### Dome Jug Kettle

Please read and keep these instructions

GB

### Varná konvice

Přečtěte si tyto pokyny a uschovějte je

CZ

*Models covered:*  
43306, 43307, 43309, 43324, 43325



[www.morphyrichards.com](http://www.morphyrichards.com)



## Getting the best from your new kettle...

### Safety first

Always pour water slowly and carefully to prevent the splashing of scalding water.

### Empty the water out of the kettle after first boiling

To clean away any deposits that are left in the kettle after the manufacturing process.

### Descale as appropriate for the hardness of the water in your area

It is important to descale as the performance of the kettle for auto switch-off will be impaired.

### Fast boil kettles perform differently

If your kettle is a fast boil model, it may sound louder during boiling, and switch off suddenly with no after noise - this is normal.

## Important safety instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

### **WARNING: Danger to the person!**

**IMPORTANT:** Damage to the appliance!

In addition we offer the following safety advice.

## Location

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- **WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.**

## Mains lead

- Do not let the mains lead hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and table.
- Do not let the lead run across a cooker or other hot area which might damage the cable.
- The mains lead should reach from the socket to the base unit without straining the connections.

## Personal safety

- **WARNING: To protect against fire, electric shock and personal injury do not immerse cord, plug and appliance in water or any other liquid.**
- **Do not move kettle when switched on.**
- Always keep the top of the cordless base dry, especially around the connection area, disconnect the power supply before drying. Allow to dry thoroughly before reconnection to the power supply.
- Always pour hot water slowly and carefully without tipping the appliance too fast to prevent splashing and spillage.
- Extreme caution must be used when moving a appliance containing hot liquid.
- Do not touch hot surfaces, use handles or knobs.
- Always close the lid if applicable and always have the filter in place.
- Avoid contact with emitting steam when the water is boiling or just after it has switched off.

- Take care if opening the lid of the appliance when hot.
- Do not open the lid whilst the water is boiling.
- Do not fill above the MAX mark, otherwise boiling water may be ejected.
- Do not hold the switch in the on position or tamper with the switch to fix it in the on position as this may cause damage to the switch-off mechanism.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.
- This appliance is not intended for use of persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the application by a person responsible for their safety.

## **Other safety considerations**

- Do not leave appliance unattended whilst in use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not attempt to connect any other appliance to the base unit or this appliance to another base unit.
- Do not tamper with the connector in any way.
- Do not use the appliance for any use other than to boil water.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- The appliance must not be on the base unit when being filled with water.
- The mains lead of the cordless base cannot be repaired. If the mains lead is damaged, the cordless base should be discarded and replaced contact the helpline for advice.
- Unplug from the outlet when not in use.



## **Children**

- Never allow a child to operate this appliance.
- Children are vulnerable in the kitchen particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure that they do not play with the appliance.

## **ELECTRICAL REQUIREMENTS**

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).


### **WARNING: The appliance must not be immersed for cleaning.**

Where used, Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

### **WARNING: This appliance must be earthed.**

## **Treating scalds**

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

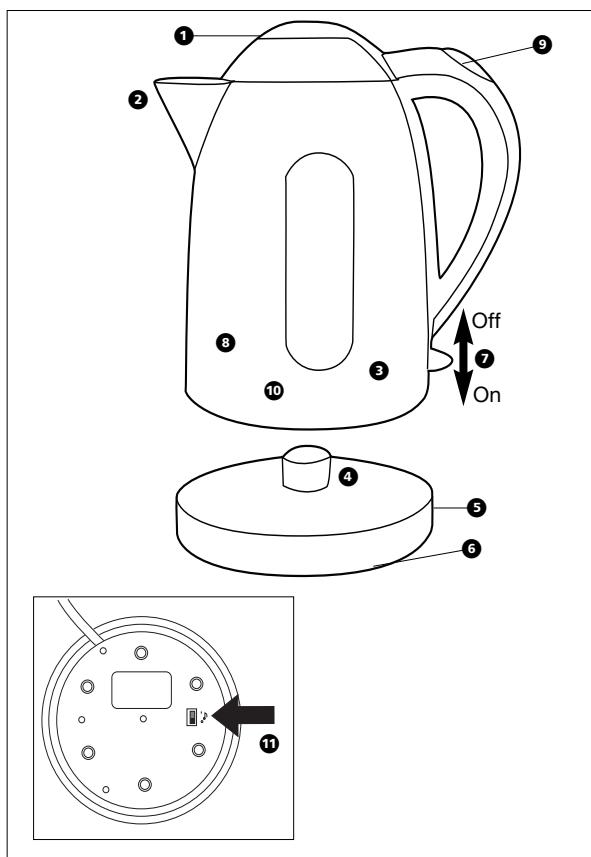

## Operating the appliance

- 1 Wherever possible fill through the spout, as this helps to free the filter from limescale build-up.
- The integrated water level indicators allow you to easily see the amount of water in the kettle.
- Always ensure that the appliance is filled till the water is visible through the level indicator.
- Boil only as much water as you need as this saves electricity.
- 2 Place the appliance on the base unit, ensuring the appliance locates on to the 360° connector.
- The 360° connector allows the appliance to be located at any position - ideal for left and right handed users and convenient positioning on worktop.
- 3 Plug in and switch on at the wall socket.
- 4 Switch the appliance on. The water level indicator will light up.
- 5 When the water boils the appliance will switch off automatically.
- If you are using the appliance for the first time, pour away the boiled water and refill.
- 6 Lift the appliance from the base unit by the handle ensuring you hold the appliance level.
  - To re-boil, switch to ON again. If the appliance has just switched off wait a minute or so before switching it back on again.
  - If you do not put in enough water, or switch on the appliance when it is empty, the safety cut-out will switch off the power automatically. If this happens, refill and wait a few minutes for the element to cool, then use as normal.

## Features

- 1 Lid with finger pad
- 2 Spout filter
- 3 Concealed element
- 4 360° connector
- 5 Cordless base unit
- 6 Cord storage
- 7 On/off switch
- 8 Water level indicator x 2 with illuminating light
- 9 Lid release button
- 10 Concealed element (inside)
- 11 Whistle on/off feature

## Before first use

Before using the appliance for the first time, fill with water, boil and pour away.

## Filter removal

- 1 Open the lid.
- 2 Lift the filter upwards from its location using the tab provided.



All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact Morphy Richards quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase.

Subject to the exclusions set out below (1-6) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2-year guarantee the appliance must have been used according to the manufacturers instructions. For example, appliances must have been descaled and filters must have been kept clean as instructed.

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 Where the appliance has been used for hire purposes or non domestic use.

5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

6 The guarantee excludes consumables such as bags, filters and glass carafes.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.



## Jak získat co nejvyšší užitek z vaší nové varné konvice...

### **Bezpečnost na prvním místě**

Vodu vždy nalévajte pomalu a opatrne, abyste zabránili vystřiknutí vody a opaření.

### **Po prvním vaření z konvice vodu úplně vylijte.**

Pro vyčištění případných usazenin, které zůstanou na konvici po výrobě.

### **Vodní kámen odstraňujte dle tvrdosti vody ve vaší oblasti**

Je důležité vodní kámen odstraňovat, protože jinak klesá účinnost automatického vypínání konvice.

### **Rychlovarné konvice mají různý výkon**

Pokud jste si zakoupili rychlovarný model, může být při vaření hlasitější a může dojít k náhlému vypnutí bez dalšího následného hluku - to je normální.

## **Důležité bezpečnostní pokyny**

Použití jakéhokoliv elektrického spotřebiče vyžaduje dodržování následujících bezpečnostních opatření.

V první řadě zde existuje nebezpečí úrazu nebo smrtelného úrazu elektrickým proudem a za druhé je zde nebezpečí poškození samotného spotřebiče. Tato nebezpečí jsou vyznačena textem podle následujících konvencí:

#### **VAROVÁNÍ: Nebezpečí úrazu osob!**

DŮLEŽITÉ: Hrozí nebezpečí poškození spotřebiče!

Kromě těchto upozornění poskytujeme následující bezpečnostní doporučení.

- Vždy udržujte bezdrátovou základnu v suchu, zvláště v okolí připojovacího místa; před vysušením odpojte napájení. Před opětovným připojením napájení ponechte základnu důkladně vyschnout.

- Vždy nalévejte horkou vodu pomalu a opatrně bez příliš rychlého naklánění konvice, abyste předešli rozstříkání a rozlití.
- Při přemisťování konvice s horkou vodou je nutné dávat velký pozor.
- Nedotýkejte se horkých povrchů, používejte držadla nebo ovládací prvky.
- Vždy uzavřete víko (pokud je součástí) a mějte vždy nasazený filtr.
- Vyhýbejte se kontaktu s párou, která se vytváří během vaření vody nebo ihned po vypnutí.



#### **Umístění**

- Vždy umisťujte váš spotřebič dál od okraje pracovní plochy.
- Ujistěte se, že spotřebič je používán na pevném, rovném povrchu.
- Nepoužívejte spotřebič venku nebo v blízkosti vody.
- **VAROVÁNÍ: Během používání nepokládejte spotřebič na kovový tac nebo kovový povrch.**

#### **Síťový kabel**

- Nenechávejte síťový kabel viset přes okraj pracovní plohy, kde by na něj mohly dosáhnout děti.
- Nenechávejte kabel procházet otevřeným prostorem, např. mezi zásuvkou u země a stolem.
- Nenechávejte kabel procházet přes sporák nebo jiná horká místa, která by ho mohla poškodit.
- Síťový kabel by měl vést od zásuvky k základně bez napínání spojů.

#### **Bezpečnost osob**

- **VAROVÁNÍ: Neponořujte kabel, zástrčku nebo spotřebič do vody ani jiných tekutin, abyste zabránili požáru, úrazu elektrickým proudem a zranění.**
- **Nepřemisťujte konvici, když je zapnutá.**

#### **Děti**

- Nenechávejte děti pracovat s tímto spotřebičem.
- Děti jsou v kuchyni zranitelné zejména tehdyn, pokud jsou bez

dozoru a používat se spotřebiče nebo se vařit.

- Učte děti, aby si uvědomovaly nebezpečí v kuchyni, varujte je před riziky při sahání do míst, na která dobře nevidí nebo nemohou dosáhnout.
- Na děti se musí dohlížet, aby bylo jisté, že si se spotřebičem nebudou hrát.

### Ošetření opaření

- Zasažené místo ihned vložte pod tekoucí studenou vodu. Nezdržujte se sundáváním oděvu, ihned vyhledejte lékařskou pomoc.

### Další bezpečnostní pokyny


- Zapnutý spotřebič nenechávejte bez dozoru.

- Nespouštějte spotřebič s poškozeným kabelem či zástrčkou, nebo pokud je porouchaný či jakkoliv poškozený. Kontaktujte Morphy Richards a požádejte o radu.
- Používání nástavců nebo nástrojů, které Morphy Richards nedoporučuje nebo neprodává, může způsobit požár, úraz elektrickým proudem nebo zranění.
- Nepokoušejte se připojovat žádný jiný spotřebič k této základně nebo tento spotřebič k jiné základně.
- Žádným způsobem nemanipulujte s konektorem.
- Nepoužívejte konvici k žádnému jinému účelu než k vaření vody.
- Neumisťujte spotřebič na horký plynovy nebo elektrický vařič, do jeho blízkosti nebo do trouby.
- Spotřebič nesmí stát při plnění na základně.
- Síťový kabel bezdrátové základny nelze opravit. Je-li síťový kabel poškozený, bezdrátová základna se musí vyhodit a nahradit. Pro další rady kontaktujte linku pomoci.
- Když spotřebič nepoužíváte, odpojte ho od sítě.

### POŽADAVKY NA NAPÁJENÍ

Zkontrolujte, zda napětí na výkonovém štítku spotřebiče odpovídá síťovému napětí v domácnosti, které musí být střídavé.

**VAROVÁNÍ:** Tento spotřebič musí být uzemněný.

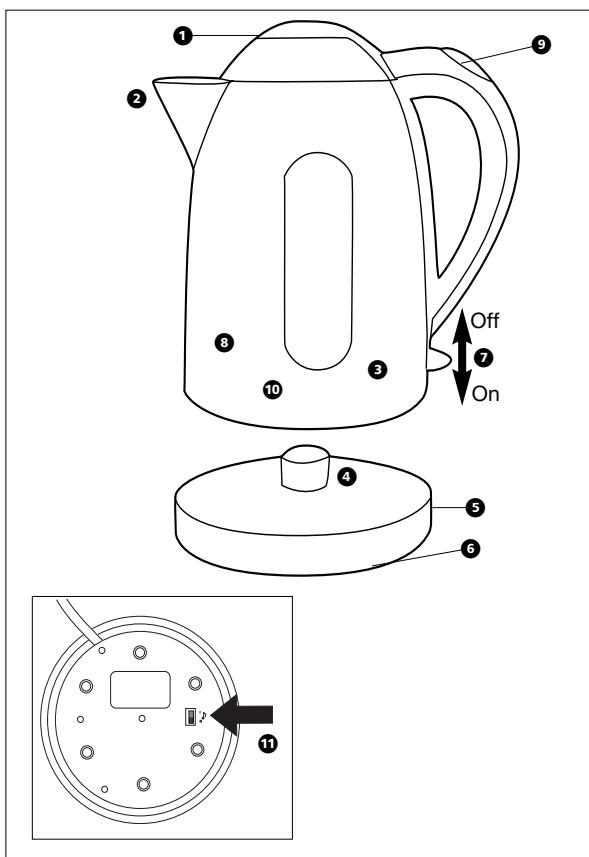





pokynů.

Společnost Morphy Richards  
nebude povinna opravit nebo  
vyměnit výrobek podle záručních  
podmínek v následujících  
případech:

- 1 Závada byla způsobena nebo zaviněna nevhodným, chybným nebo nedbalým používáním nebo používáním způsobem, který je v rozporu s doporučením výrobce, nebo proudovými nárazy v síti či poškozením při přepravě.
- 2 Spotřebič byl napájen jiným napětím, než jaké je uvedeno na výrobku.
- 3 Došlo k pokusu o opravu jinými osobami než naším servisním personálem (nebo autorizovaným prodejcem).
- 4 Spotřebič se pronajímal nebo používal k jiným účelům než v domácnosti.
- 5 Společnost Morphy Richards neodpovídá za žádné opravy prováděné v záruční lhůtě.
- 6 Záruka se nevztahuje na spotřební materiály, například sáčky, filtry a skleněné karafy.

Tato záruka nepropůjčuje žádná jiná než výše uvedená práva a nevztahuje se na žádné reklamace týkající se následných ztrát nebo škod. Tato záruka je nabízena jako další výhoda a nemá vliv na vaše zákonné práva spotřebitele.

CZ



**GB** For electrical products sold within the European Community.

At the end of the electrical products useful life it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.

**CZ** Pro elektrické výrobky prodávané v Evropském společenství.

Elektrické výrobky se po skončení životnosti nesmí vyhazovat do domovního odpadu.

Nechte je recyklovat v příslušných zařízeních.

Informace o recyklaci ve vaší zemi si zjistěte od místních úřadů nebo prodeje.

**GB** Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design.

The Company, therefore, reserves the right to change the specification of its models at any time.

The After Sales Division,  
Morphy Richards Ltd, Mexborough, South Yorkshire,  
England, S64 8AJ  
Helpline (office hours) UK 0870 060 2609  
Republic of Ireland 1800 409119

**CZ** Výrobky Morphy Richards jsou určeny pouze k použití v domácnostech.  
Morphy Richards usiluje o neustálé zdokonalování kvality a provedení.  
Proto si vyhrazuje právo kdykoliv změnit specifikace svých modelů.

**morphy richards®**

KT43312MCZ Rev 1 01/08

[www.morphyrichards.com](http://www.morphyrichards.com)